



GOFINDER SMARTSYSTEM - NOTES FOR USERS

1. Installing Batteries

The Smartone is powered by two or four lithium “AA” batteries. Please refer to the **Battery Installation Guide** which covers the six steps necessary.

2. Turning on or off

To turn the device ‘on’ or ‘off’ remove the connector cover from the end of the device.

Then invert and replace the connector cover so that the word “off” or “on” IS VISIBLE.

3. Mounting

The Smartone is designed to be mounted to an asset using double-sided adhesive tape and/or the included mounting bracket. This has four screws that attach to the asset and allows the Smartone to be mounted pointing towards or away from the asset. This enables the antenna to have a direct view of the sky with mounting flexibility.

The Smartone attaches to the mounting bracket using four Phillips –head screws that can be found in the battery compartment (remove prior to fitting batteries). The side that must point to the sky is clearly indicated as “This Side Towards Sky” on the casing.

4. Configuration

The Smartone comes ready to use with a factory configuration loaded into the device. For this to be changed the device will need to be returned to Gofinder and a re-programming

Charge will apply.

5. Name of the unit

The device is identified by a number underneath the Bar Code set in the underneath of the unit e. g 1003345. On the website you will find this unit named GF 3345. This can be renamed by selecting “System Settings” at CONFIGURE/MANAGE YOUR DEVICE. Please

Quote the device number and your Username in any contact with Gofinder.

6. Using the website

Please refer to the separate User Guide forwarded to you with your Username and Password.

You may log –in at www.gofinder.net with the Username and Password supplied.

7. Setting alerts on your website page

You may arrange to be alerted via SMS (25c.each) or email (Free) when motion alerts are generated by your Smartone.

To set **this up:**

a. **First list the recipients of the alerts**

Go to System configuration>Add/Edit Alert Recipients>add details>Add.

To change the phone number of a Recipient, click the LIST button, select the recipient, then make the changes and click the EDIT button

b. **Set the alerts and notifications**

Go to Alerts and Notifications>select Default Group>select device>select Edit Settings>select recipient>select required SMS/Email alerts>save changes>confirm action Yes/No

Initially, it is not necessary to select any other alert than “Motion Detected”. Once the Smartone’s position is outside the Change of Location area, it alerts the device to an unauthorised movement and immediately sends a location message. The Smartone then continues to send location messages at a message interval set during the configuration process until the power is turned off and the battery is dead. In Theft Recovery mode routine daily messages will be sent at 24 hour intervals from the time the device is switched on.

Please contact support@gofinder.net quoting your Username and the Device number should you have any queries.